




WBR-3408 設定

<電腦設定>


一. WinXP 設定

◆確認 TCP/IP

1. 點選 開始→控制台→網路連線 按滑鼠右鍵選擇『開啓』。

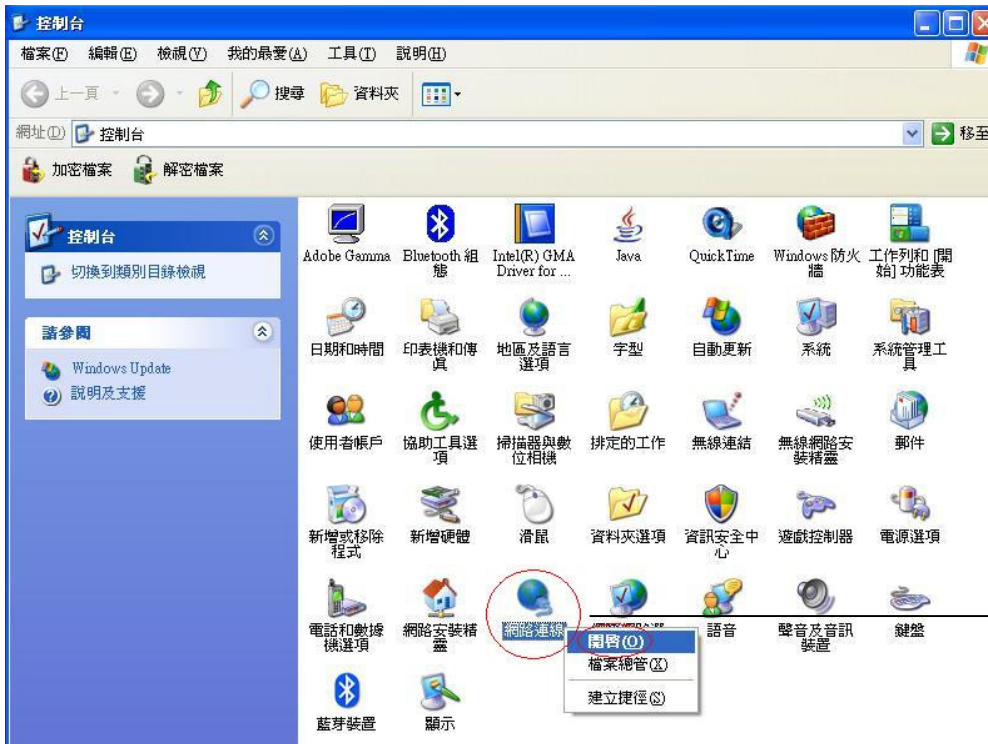


2. 點選『區域連線』按滑鼠右鍵選擇『內容』。

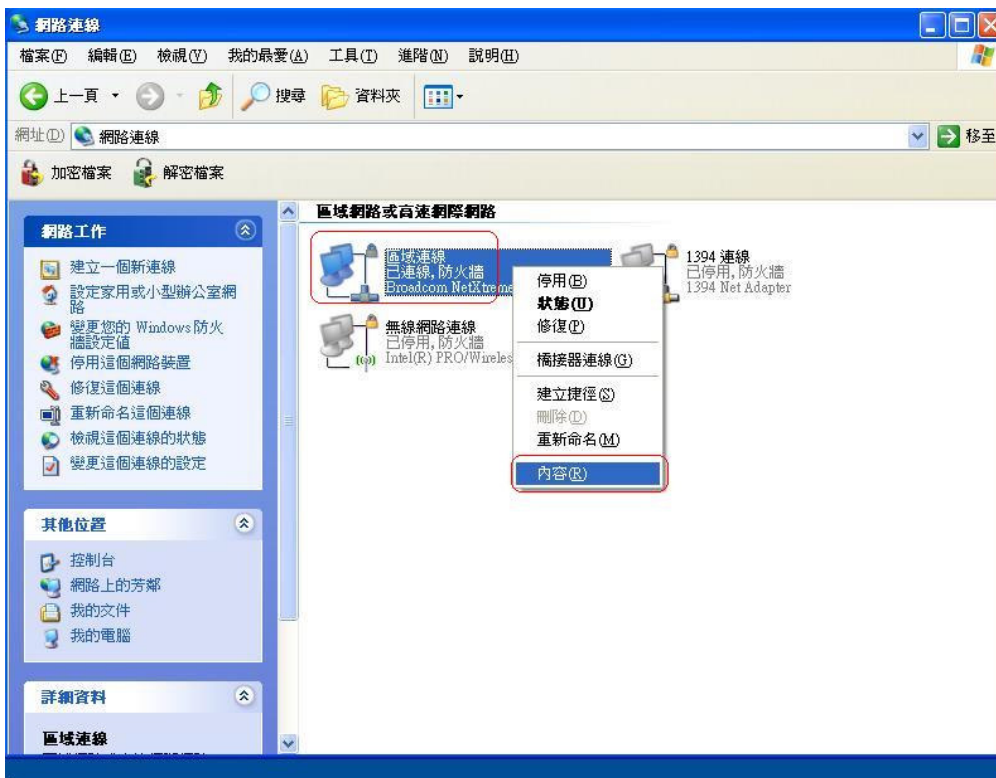

3. 點選『一般』→ Internet Protocol (TCP/IP) → 內容。




4. 點選“自動取得 IP 位址”和“自動取得 DNS 伺服器位址” → 確定。

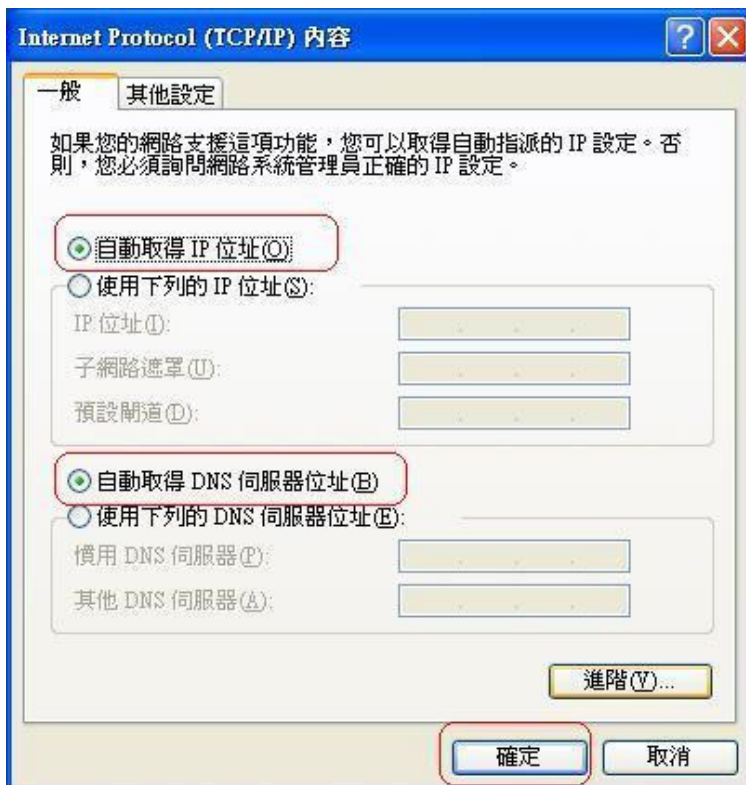

5. 請重新開啓電腦。

機器連接示意圖

1. 請先關閉電腦及 WBR-3408。
2. 將數據機上的網路線接到 WBR-3408 的 WAN 埠。
3. 再使用另一條網路線將 WBR-3408 任一埠的 LAN 埠與 PC 的網路卡連接。
4. 先插上 WBR-3408 的電源器再開啓電腦電源。

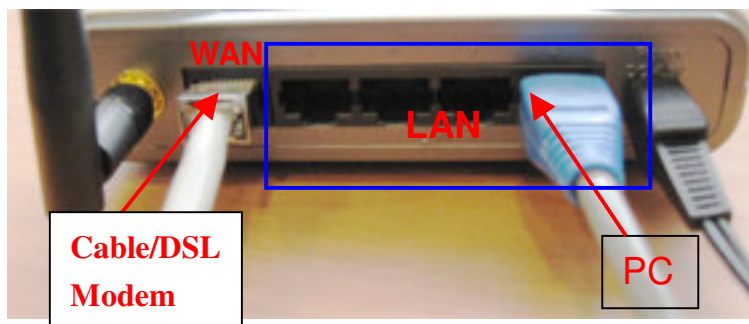


<WBR-3408 設定>

1. 點選桌面上 Internet Explorer 圖示開啓瀏覽器。




2. 在 Web 瀏覽器網址欄位內輸入 “<http://192.168.0.1>” 按 Enter 鍵。

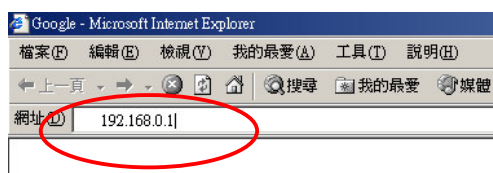


3. 點選 『WAN Wizard』，開啓設定精靈。



4. 點選 『Next』

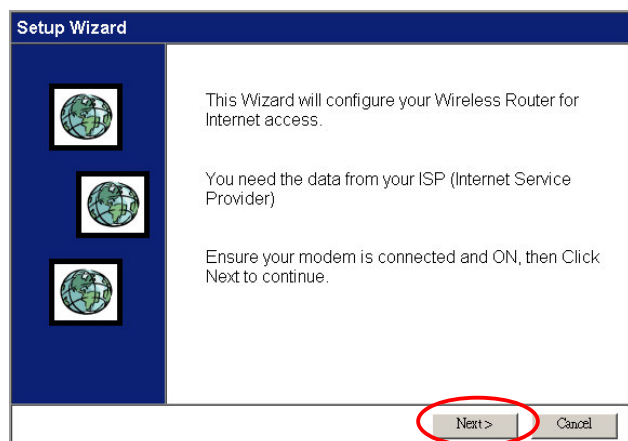

5. 選取您的寬頻連線

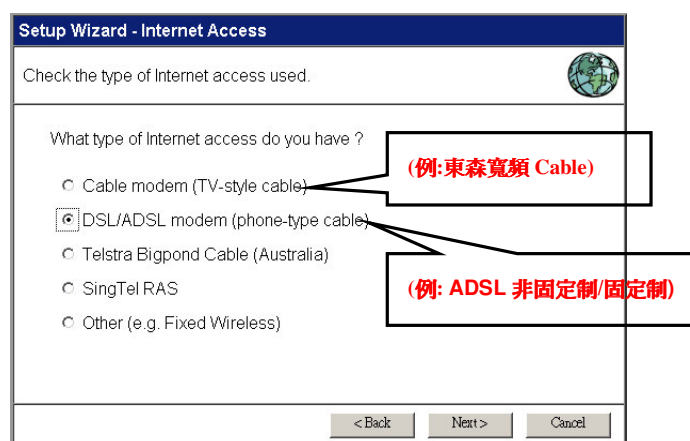

◎ DSL/ADSL modem (phone-type cable)

1. 在 User Name & Password 中輸入帳號及密碼(電信業者提供)。

Setup Wizard - PPPoE

Check the data supplied by your ISP.

Enter the PPPoE "Username" and "Password" provided by your ISP.

User Name:

Password:

Connect behavior: Keep alive (maintain connection)

Auto-disconnect Timeout period: min

< Back **Next >** Cancel

請輸入帳號及密碼，若為中華電信
務必在帳號後再輸入 @hinet.net

選取

2. 選擇您寬頻的類型

Setup Wizard - IP Address

Check the data supplied by your ISP.

What type of IP Address was assigned by your ISP ?

IP Address is assigned automatically (Dynamic IP Address)

Specified IP Address (Static IP Address)

IP Address Type:

IP Address:

Network Mask:

DNS IP address:

Network Mask is for Unnumbered IP only

< Back **Next >** Cancel

ADSL 非固定制

ADSL 固定制

若選取 Specified IP Address(Static IP Address)，務必輸入 IP Address、Network Mask、DNS IP address。

3. 點選『Finish』。

Setup Wizard

Data input completed.

Test Internet Connection

Click "Finish" to save all data to the Internet Gateway.

Test results

```
Starting test.  
Contacting remote server.  
Server response OK.  
Test successful. Internet access is now available.
```

< Back **Finish** Close

◎ Cable modem (TV-Style cable)

1. 點選『Clone MAC Address』

Setup Wizard - Cable Modem

Use the default values if your ISP did not provide this data.

Hostname:

Domain Name:

Login method:

MAC (physical) Address:

Default Clone MAC Address

< Back **Next >** Cancel

點選

2. 點選『IP Address is assigned automatically(Dynamic IP Address)』

Setup Wizard - IP Address

Check the data supplied by your ISP.

What type of IP Address was assigned by your ISP?

IP Address is assigned automatically (Dynamic IP Address)


Specified IP Address (Static IP Address)

DNS: Automatic (obtain from server)

Fixed:



< Back **Next >** Cancel

3. 點選『Finish』。

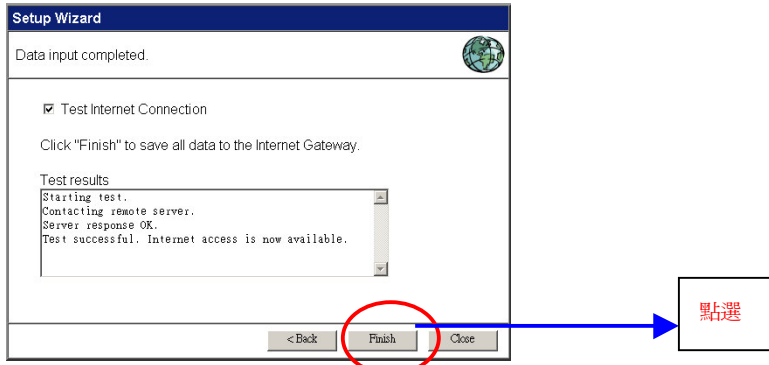

6. 設定您登入 WBR-3408 設定畫面的密碼

6.1 點選『Password』→ 輸入密碼 → 按『Save』。

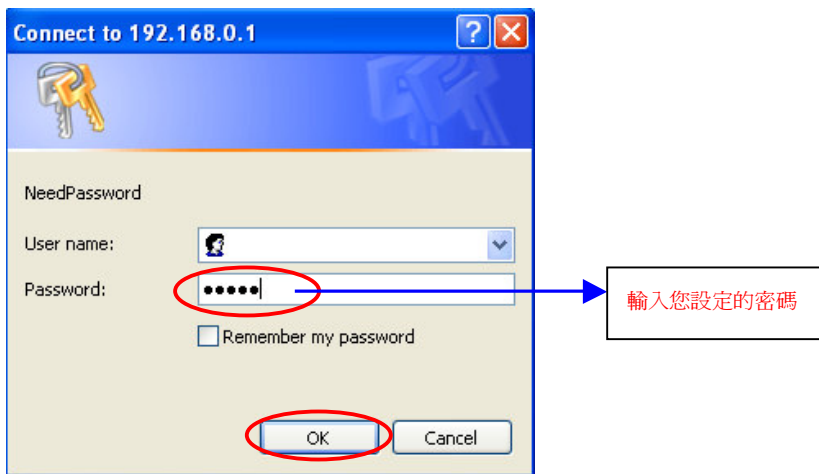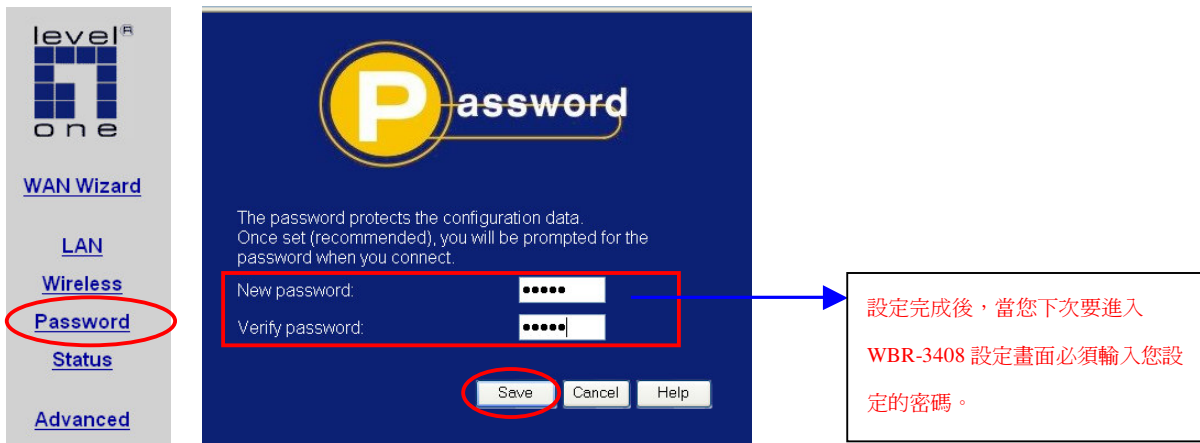

7. 設定您的 SSID 及無線網路加密。





Status

Internet Connection Method: PPPoE
Broadband Modem: Connection OK
Internet Connection: Active
Internet IP Address: 61.31.172.132
Connection Details

LAN IP Address: 192.168.0.1
Network Mask: 255.255.255.0
DHCP Server: ON

System Device Name: SC120262
Firmware Version: Version 1.0 Release 07
System Data

Restart Refresh Screen Help

設定成功，已可透過 WBR-3408 上網

WBR-3408 韌體版本

<韌體更新>

點選左列 “Advanced” 再點選 “Upgrade Firmware”。



Features

Access Control Define Internet access rights for PCs on your LAN.

Dynamic DNS Use with "Virtual Servers" to allow Internet users to connect to you using a URL instead of an IP address.

Internet Special Applications, DMZ, URL Filter

Virtual Servers Allow Internet users to access Servers on your LAN.

WAN Port An alternative to using the Wizard for Internet Access configuration.

Configuration

Config File Backup or restore the configuration file for the Wireless Router.

Logs Set system log options, E-mailing of logs, view all logs.

Network Diag Ping, DNS Lookup.

Options Backup DNS, TFTP firmware upgrade, UPnP.

PC Database View and modify the list of PCs.

QoS Quality of Service settings.

Remote Management Allow management of this device via the Internet.

Routing Only required if your LAN has other Routers or Gateways.

Security Firewall and other security-related settings.

Upgrade Firmware The firmware can be upgraded using your Web Browser.

Upgrade Firmware - Microsoft Internet Explorer

Address: http://192.168.0.1/upg_fw.htm

Upgrade Firmware

The upgrade firmware file needs to be downloaded and stored on your PC.

Wireless Router Password:

Upgrade File: Browse...

Start Upgrade Cancel Help

點選 “Browse...” 並選取您存放最新韌體檔案之位置。

點選