







How to Configure Printer Server using TCP/IP in Windows Vista ?

1. Install printer server utility on your PC first.
2. Find out the IP of your printer server.

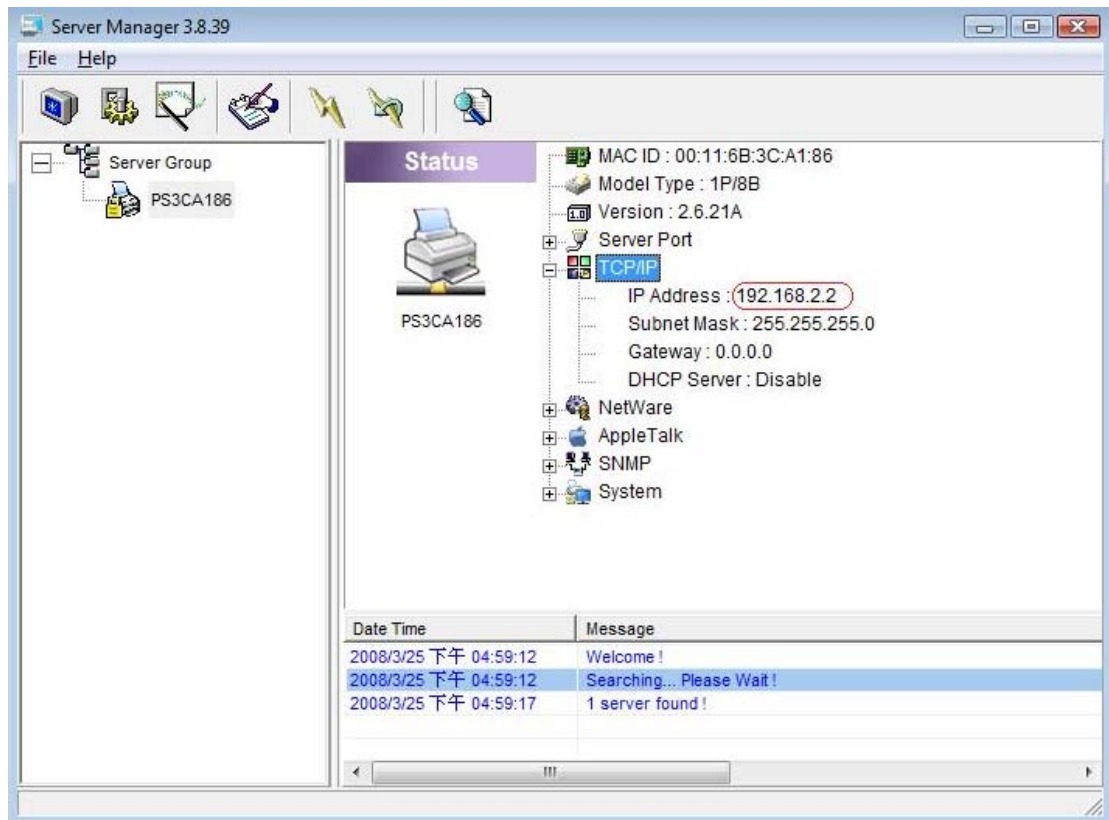


3. Go to **Printers** to add a new printer.
4. Add a local printer and follow the snapshots below.

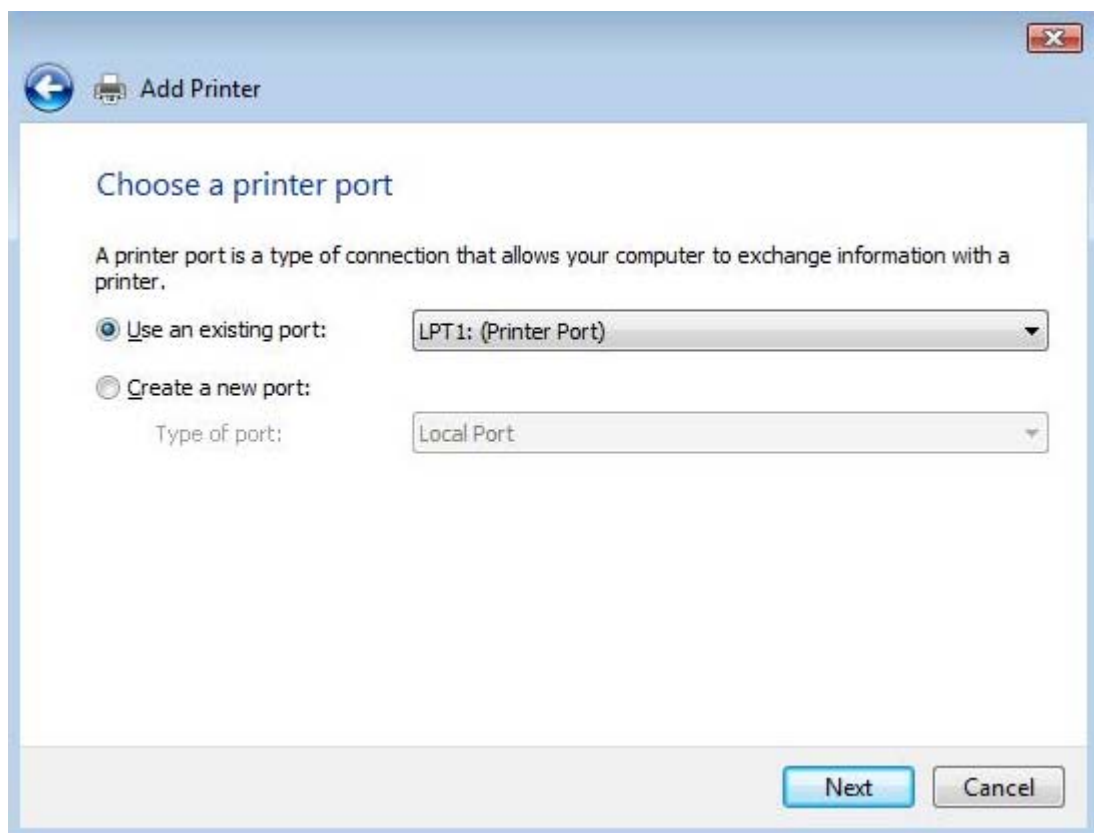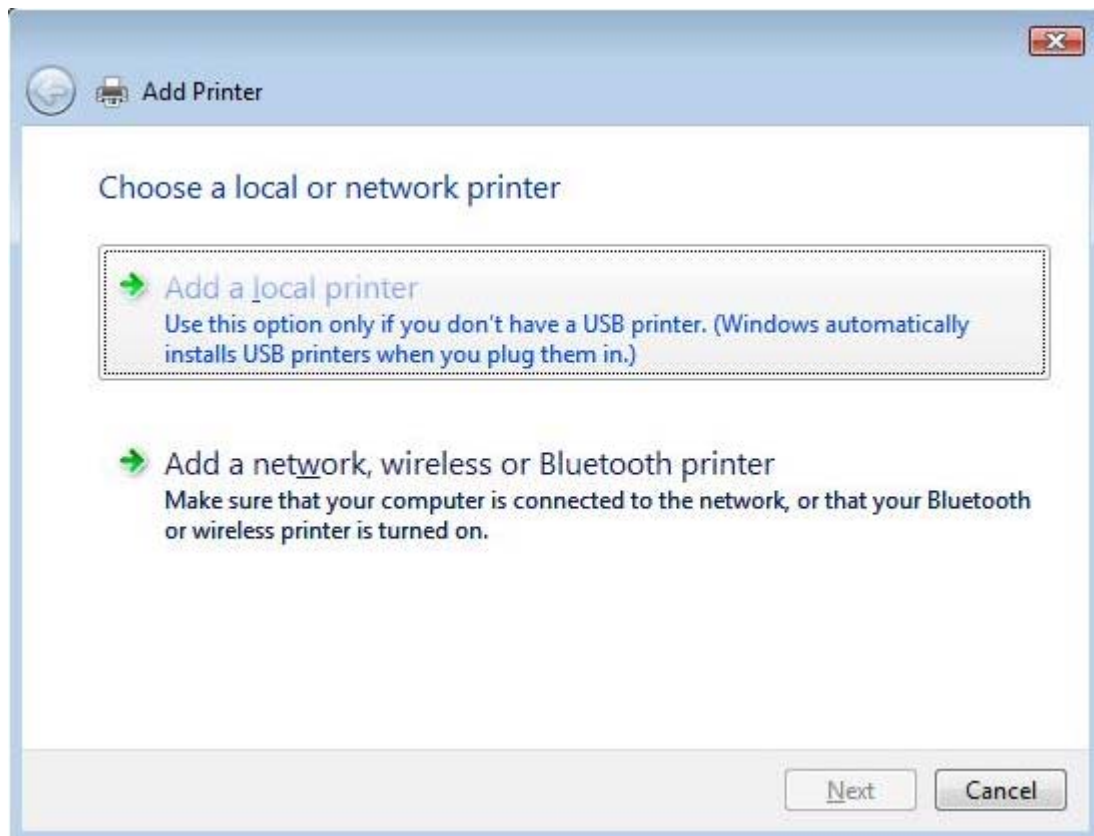

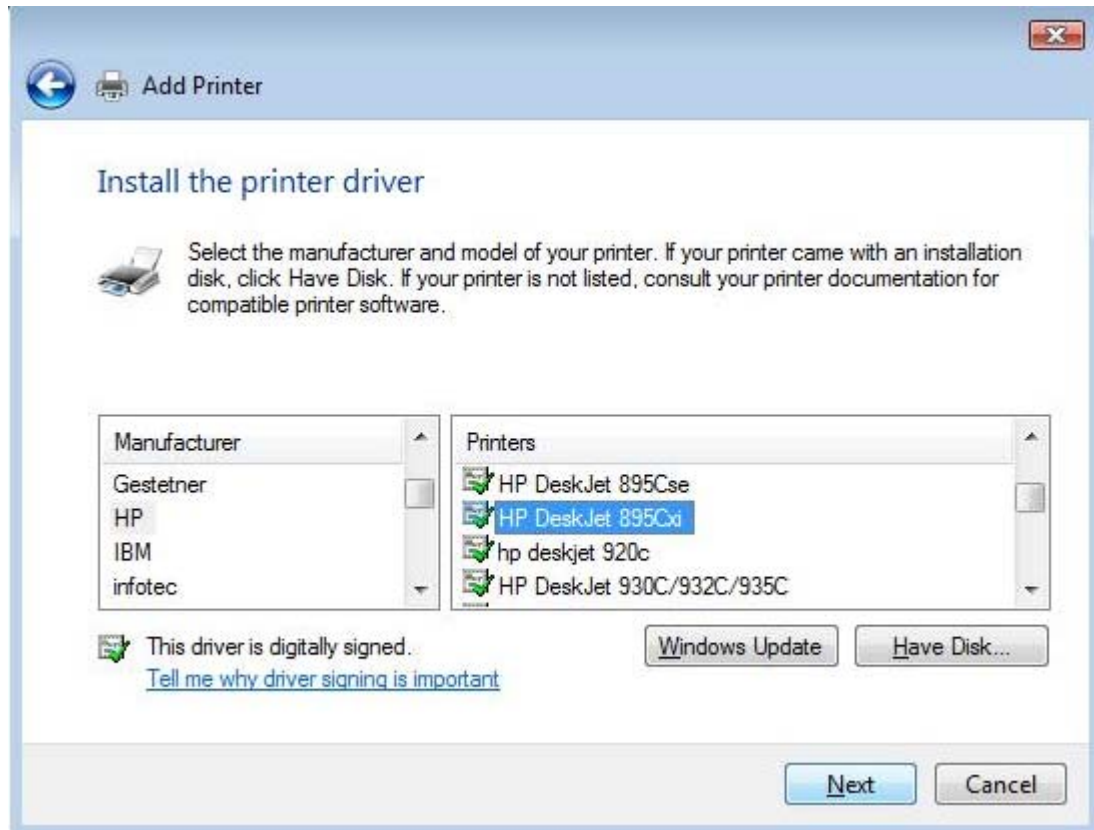


Find your printer and select it. If there is no your printer in the list, please install a driver of your printer then you will find your printer in the list


5. After you are done adding a printer, right click the printer icon and select “property” then select “ports”.
6. Clicks add port.

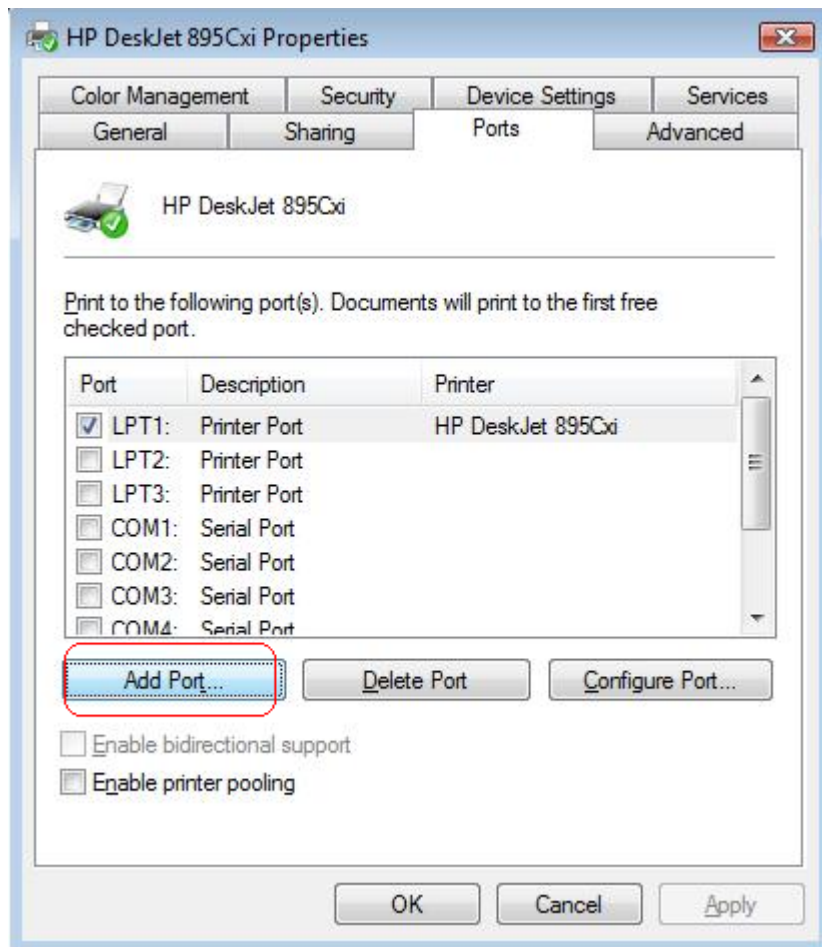


7. Selects Standard TCP/IP Port.

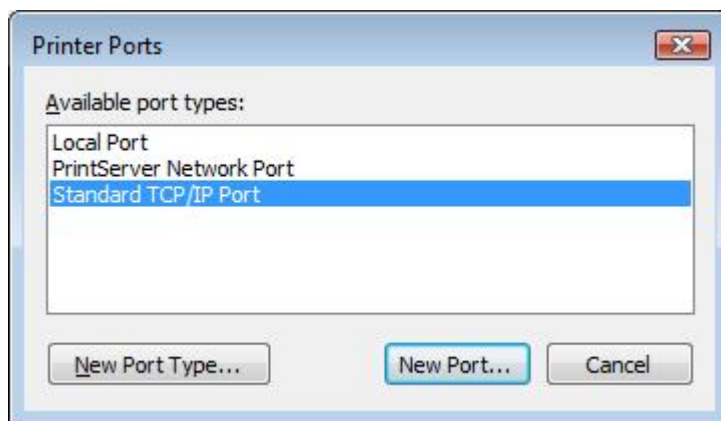

8. Input your printer server's IP address.

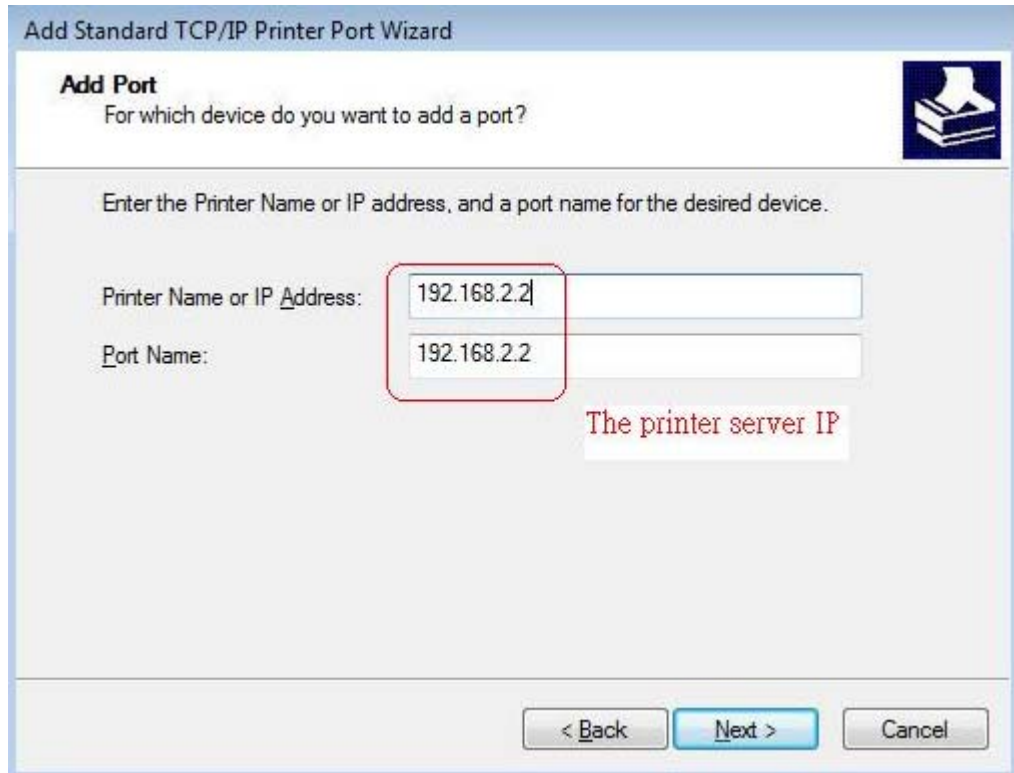

9. After adding port, click configure port

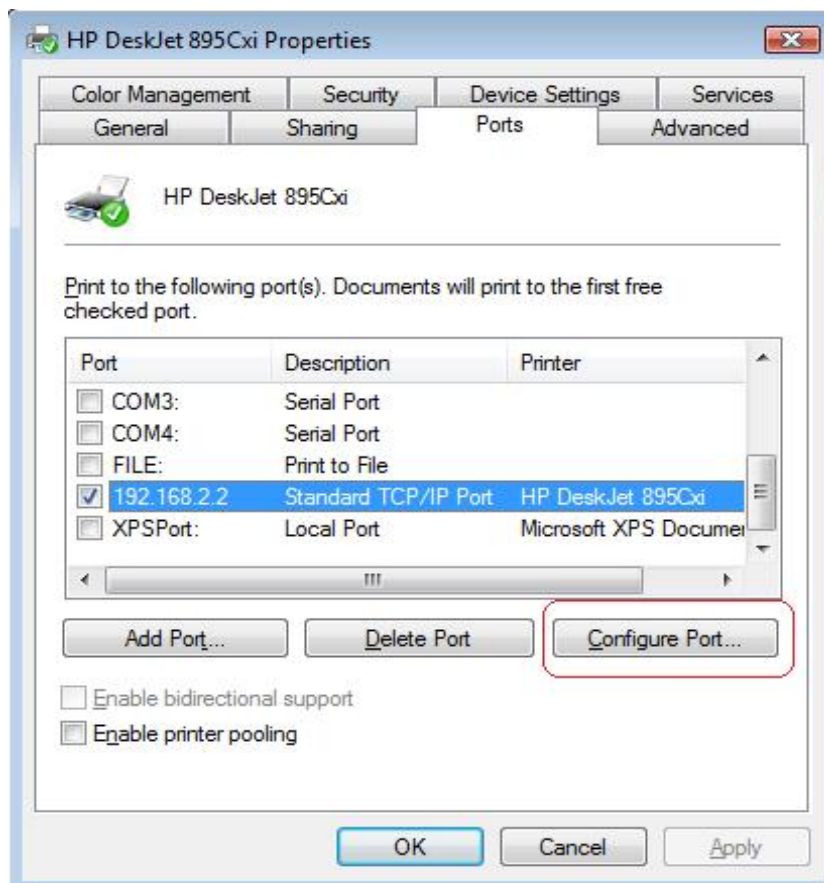

10. Please make sure your settings are the same as the snapshot below except IP.

Configure Standard TCP/IP Port Monitor

Port Settings

Port Name: 192.168.2.2

Printer Name or IP Address: 192.168.2.2

Protocol

Raw LPR

Raw Settings

Port Number: 515

LPR Settings

Queue Name: lpt1

LPR Byte Counting Enabled

SNMP Status Enabled

Community Name: public

SNMP Device Index: 1

OK Cancel

You will be able to print through your printer server.