

How to configure Dual Monitor on IP Cam Secure ?

Scenario

IP Cam Secure supports dual monitor display. You can setup live view on both Monitor 1 and Monitor 2 or watch playback on either one of them. To do this, you will need to have a <u>graphic cards</u> installed in your computer.

A. Setting up dual monitor

Connecting to the graphics card

1.) Plug Monitor 1 into the <u>DVI</u> or <u>DSub</u> port and Monitor 2 into the DSUB port on the <u>graphic card</u>

Some graphic cards may have two <u>DVI</u> ports or two <u>DSUB</u> ports instead of one DVI and one DSUB ports shown in the illustrations, go ahead and plug them in.



B. Setup in Windows (Windows XP)

2.) Right-click on [Windows Desktop]->[Properties]->[Settings]

3.) Select Monitor 2 and click on [Extend my Windows desktop onto this monitor] to enable it.



isplay Properties 💦 👔					2
Themes	Desktop	Screen Saver	Appearance	Settings	
Drag th	e monitor ic	ons to match the	e physical arran	gement of your n	nonitors.
			-		
	1	1/22			
			2		
	-		-		
			<u> </u>		
Display	4			_	_
2. (Mu	tiple Monito	rs) on ATI Mobil	ly Radeon X23	00	~
Scree	en resolution			lity	-
Less	-0-	More	Highest	(32 bit)	~
	1024 by 768 pixels				
Lise	this device	as the primery n	nomine		-
Exte	this device and my Win	as the primery r dows desktop or	nonitor No this monitor)	
Exte	nd my Win	as the primary r dows desktop or Identity	namitor nto this monitor) oot Adys	inced
Exte	nd my Win	as the primery of dows desktop of [dentify	nto this monitor) oot Ad <u>v</u> e	inced

- C. Setup in IP Cam Secure main console
- 4.) Start [Main Console]->[Config]->[Setting]->[Monitor Display]
- 5.) Click on [Primary]

6.) Add/Remove any camera you want to view on the primary monitor by moving them between (X) and (Y) panels



Image: Secondary Image: Secondary	Auto Scan Primary Channel (Not Used) • Secondary Channel (Not Used) • Auto-scan Interval 2 sec. Layout Nath Type: But • Popup Comera on Event
---	---

7.) Click on [Secondary] and pick the cameras to be displayed on the secondary monitor

8.) Select [2] at [Run Playback on Monitor] to have playback displayed on Monitor 2

9.) Click [OK] to save all configuration and back to the live view interface

Image: Constraint of the second state of the second sta	Auto Scan Primary Channel (Not Used) • Secondary Channel (Not Used) • Auto-scan Interval 2 sec Layout NNN Type: (Ind) • Popup Camera on Event 007151
---	---



10.) In main console, click on [Start]->[Enable Secondary Display]

- [Start] in main console, not Windows start menu
- 11.) You have just completed dual monitor display.
- 12.) You can also click on [Playback] to watch playback on Monitor 2.