







## How to use FPS-9021 and WPS-9122 on Vista by TCP/IP

1. Install printer server utility on your PC first.
2. Find out the IP of your printer server.

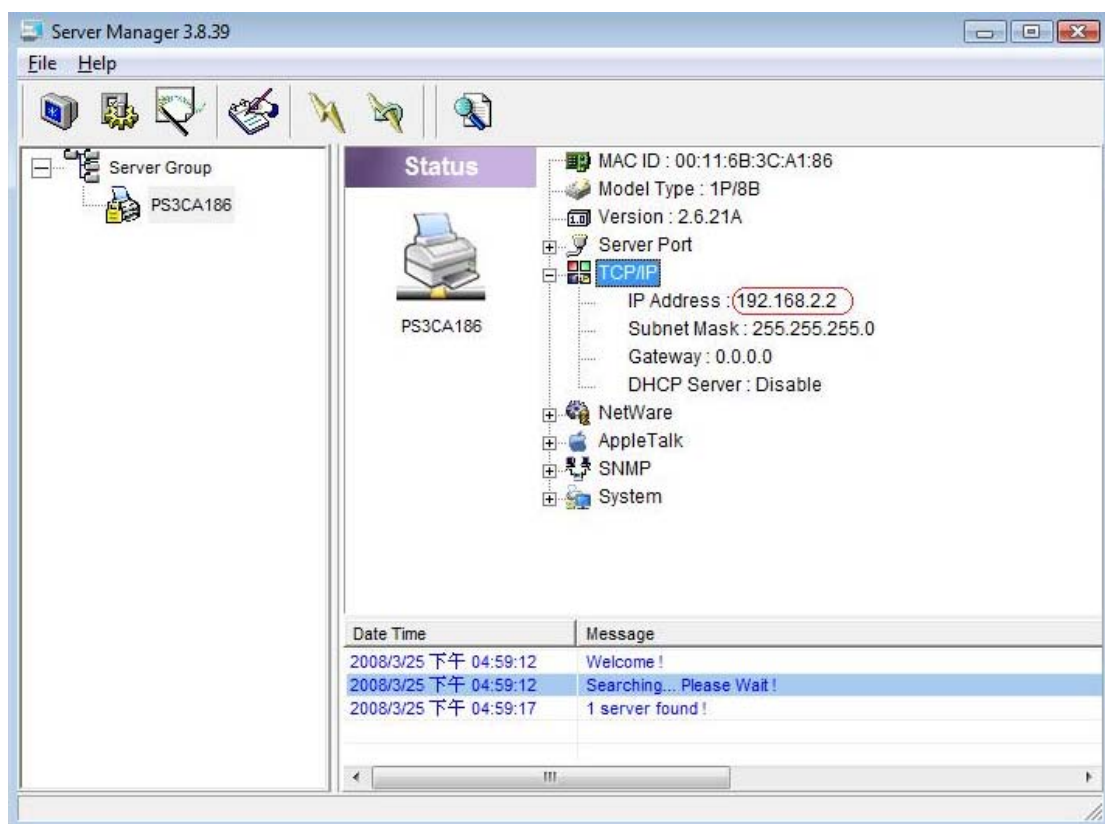


3. Go to **Printers** to add a new printer.
4. Add a local printer and follow the snapshots below.

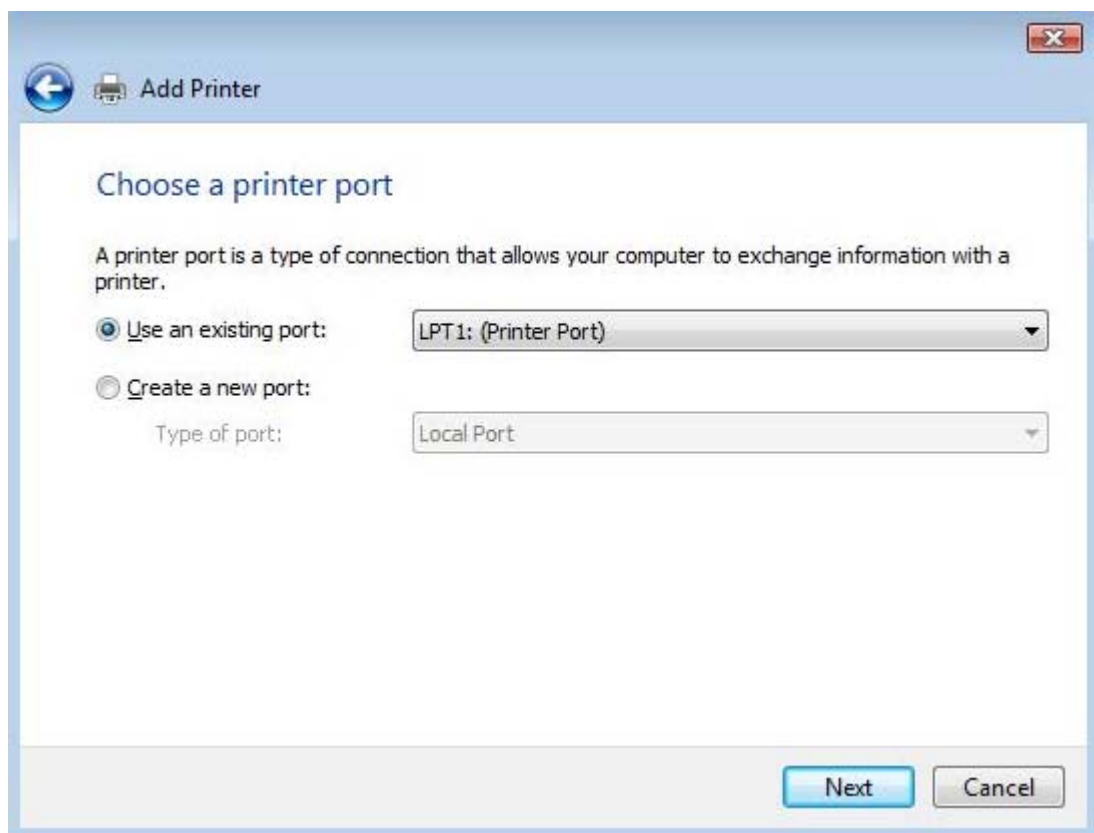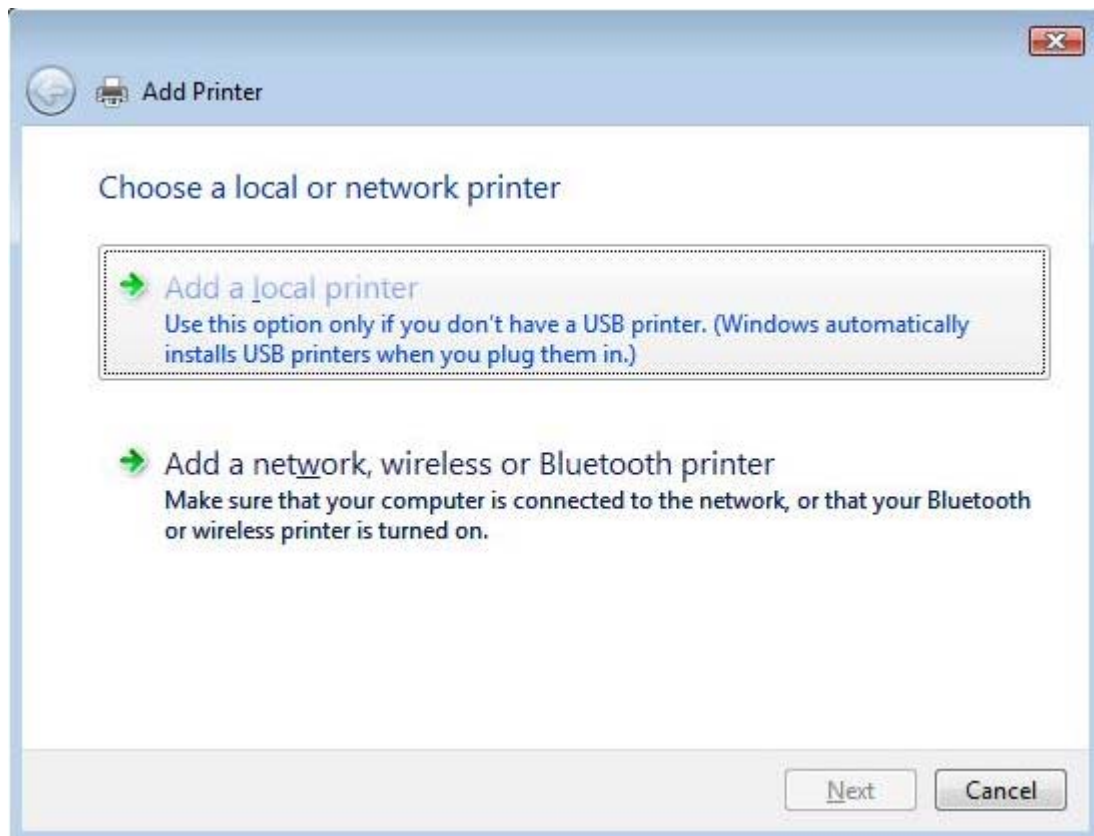

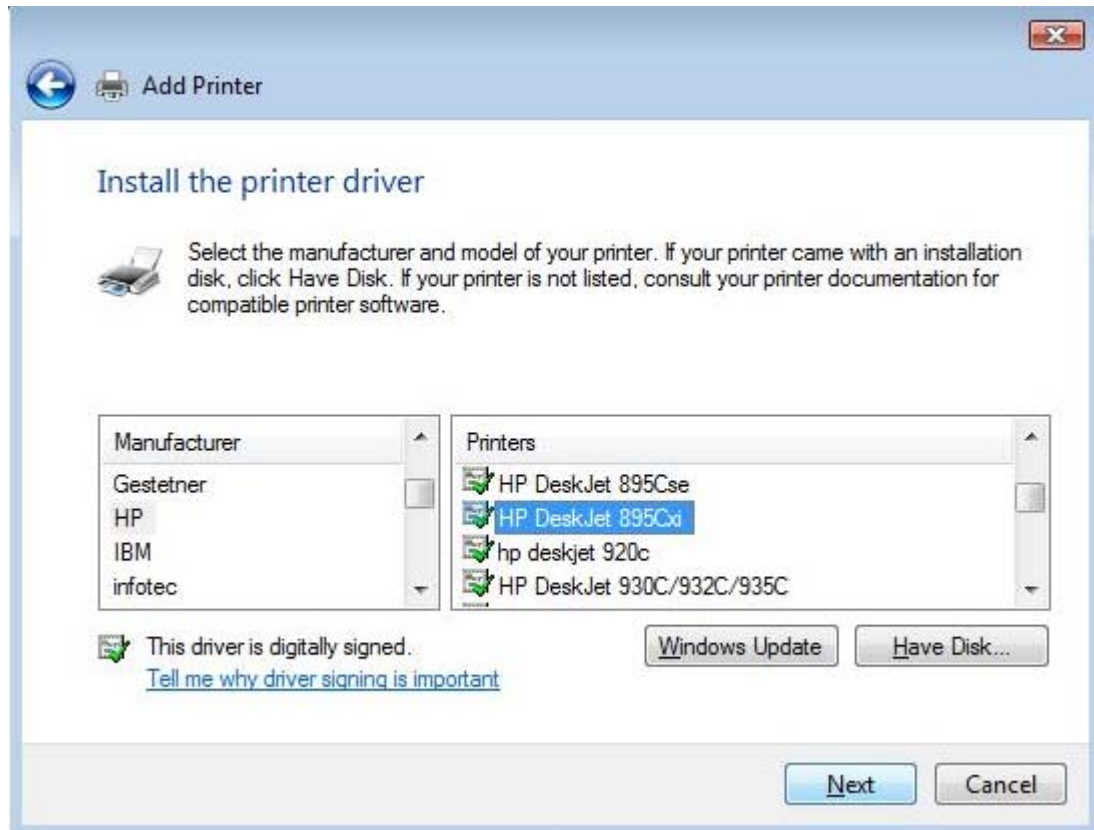


Find your printer and select it. If your printer is not in the list, please install a driver of your printer then you will find your printer in the list


5. After you are done adding a printer, right click it and select property then select ports.
6. Clicks add port.

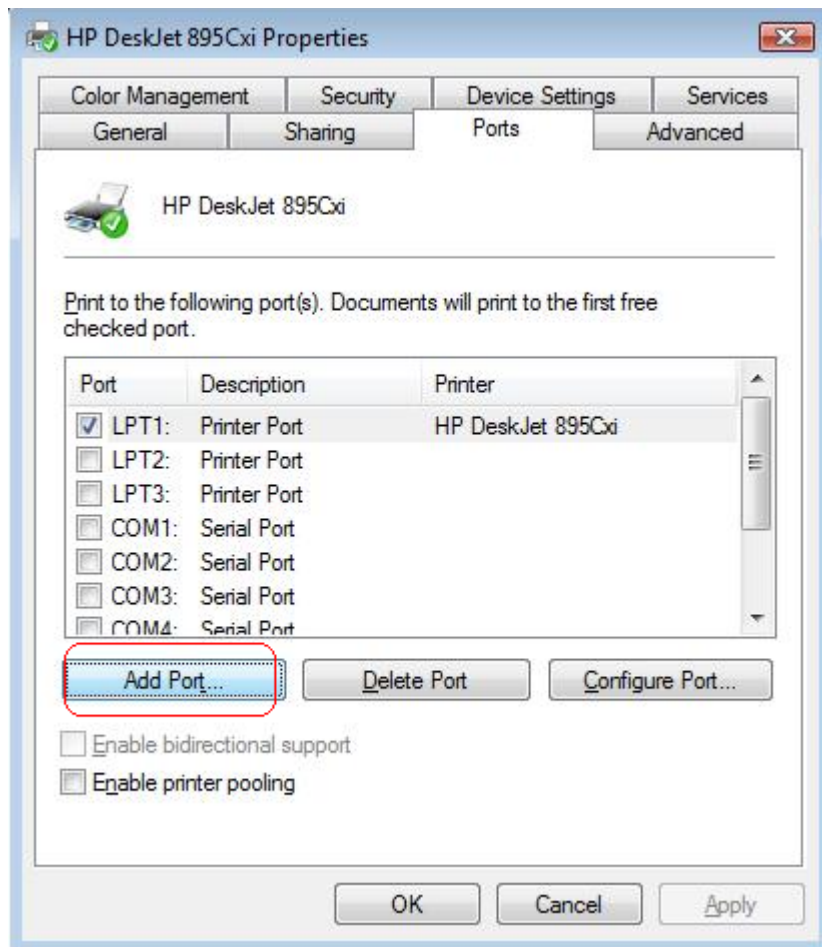


7. Clicks Standard TCP/IP Port.

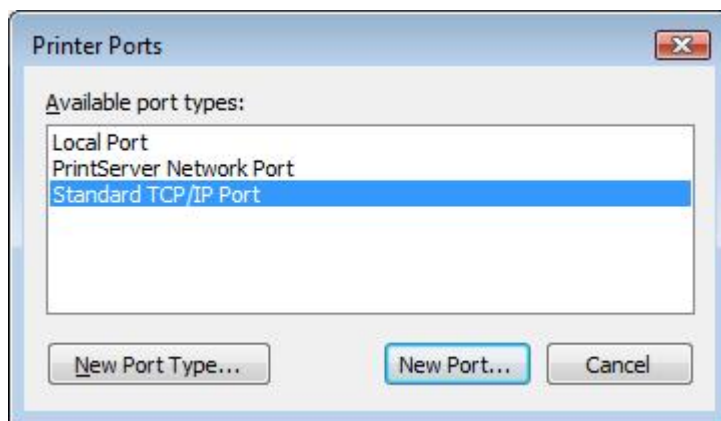

8. Put your printer server IP

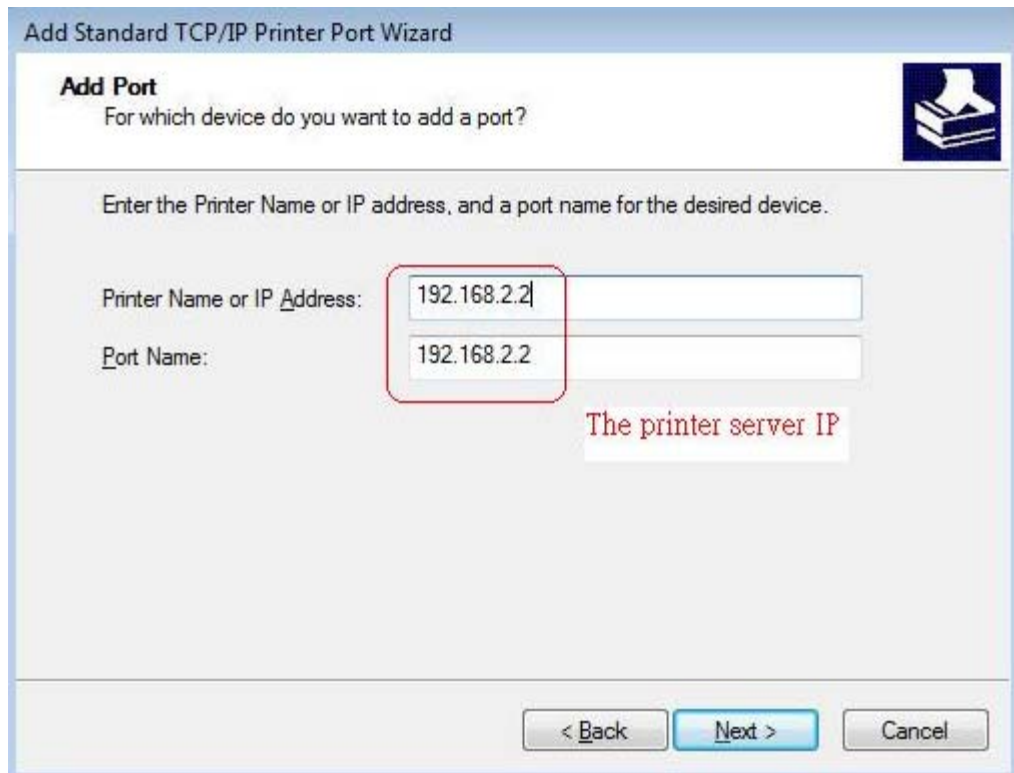

**9. After adding port, click configure port**

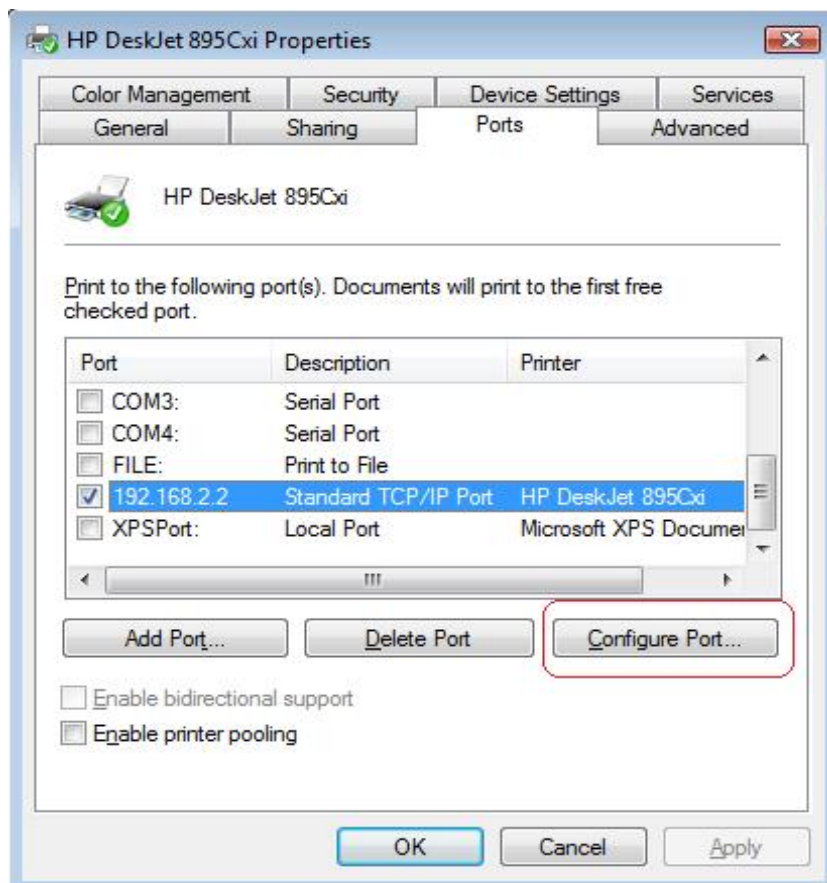

10. Please make sure your settings are the same as the snapshot below except IP

Configure Standard TCP/IP Port Monitor

Port Settings

Port Name: 192.168.2.2

Printer Name or IP Address: 192.168.2.2

Protocol

Raw  LPR

Raw Settings

Port Number: 515

LPR Settings

Queue Name: lpt1

LPR Byte Counting Enabled

SNMP Status Enabled

Community Name: public

SNMP Device Index: 1

OK Cancel